

# Quick start guide

stc<sup>tv</sup>


## Contents




4K Smart box



Remote control



HDMI cable




Power cord

## Remote control



## Setup

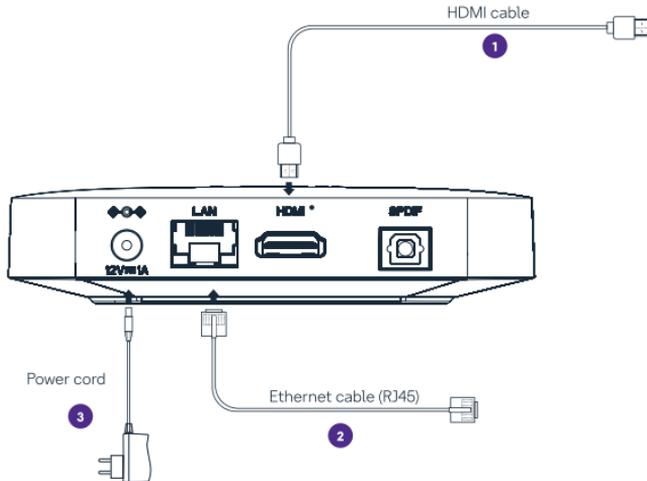

### 1. Connect to the TV set

Connect the HDMI cable between stc tv device and the TV set. To display the picture from the device, the TV set must be switched to the correct external input. This is either done automatically or manually, using a button on the TV remote control. See your TV user's guide for instructions.

### 2. Connect to internet

Connect your stc tv device to the Ethernet port of your router or wall socket using the provided Ethernet cable. If connecting the device to Ethernet port is not possible, don't worry, you can easily connect to your Wi-Fi network later.

### 3. Connet to power

Connect the power supply to the DC jack on the stc tv device and to a power outlet. Your device will power on and stc tv logo will fill the TV screen.

#### **4. Set up remote control**

Insert the batteries in the remote control. Then, follow the instructions on the TV screen to pair the remote control to your stc tv.

#### **5. Select language**

Select Arabic or English as your preferred language.

#### **6. Set up with Android™**

Follow the instructions on the screen to complete connecting any of your Android devices with stc tv. You may skip this step if you wish.

#### **7. Connect to Wi-Fi**

If the device isn't connected to Ethernet port, you will be prompted to choose your Wi-Fi network and enter Wi-Fi password. You may also use Ethernet cable to connect the device with your router. Once connected, your device will install updates and may restart.

#### **8. Set up Google account**

Sign into your Google account, accept Google's terms of service and follow the instructions on the screen to complete the set-up.

#### **9. Last step**

stc tv application will launch. Please sign into stc tv.

Congratulations! The setup is now complete. Use the remote control to explore stc tv and start watching your favorite movies, TV shows and TV channels.

## Frequently-asked questions

### **I have forgotten my password/PIN. What should I do?**

You can easily retrieve your password/PIN by using Forgot my password/PIN feature on the “Sign in” screen.

### **Can I set up multiple profiles for my family?**

Absolutely! You may create profiles for you as well as your family from the Settings screen and set age-appropriate parental control level on each profile. You can even set up profile lock on some profiles to make the viewing experience safe for kids.

### **How do I set up parental controls on my stc tv?**

You can set an age-appropriate parental control level on each profile. Parental control ratings range incrementally from F (Family), PG, 15, 18 to R18 (R18 contains unrestricted content). To set up parental controls, please navigate to Settings and Manage your profile settings.

You can also take benefit from the Channel lock feature which allows you to restrict playback on the channels you do not wish to watch.

### **How to watch live TV program from the beginning?**

You can watch previously aired and currently airing programs from the beginning using the Startover feature. Press ① on the remote control to display info panel of the program on the screen. Navigate to Startover button and press OK to watch the program from the beginning.

## Warning

1.  This equipment is a class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.
2. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases.
3. **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
4. **WARNING:** The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or other common similarities.
5. **WARNING:** The mains plug/appliance coupler/direct plug-in adapter is used as disconnect device, the disconnect device shall remain readily operable.
6.  Correct disposal of this product. This marking indicates that this product should not be disposed with other household wastes. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.
7. For the terminals marked with symbol of "" may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the used of ready-made leads or cords.

8. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
9. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user serviceable parts inside. Refer servicing to qualified personnel.
10. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
11. Use only the AC adapter which is included in the product package. Any other adapter may cause damage to the device. Such damage is not covered under warranty.

Name:	HP4105-Intigral
Model No.	Jawwy-TV-2.0
Memory:	2 GB
Flash memory:	16 GB
Power supply	12V $\equiv$ 1A
Working enviroments:	Working temperature: 0°C ----+45°C Storage temperature: -20°C----+45°C

**stc** tv

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

**HDMI**<sup>TM</sup>  
HIGH-DEFINITION MULTIMEDIA INTERFACE

King Abdulaziz Telecommunication Complex,  
Mursalat, building 5, 3rd floor  
P.O. Box: 300483, Riyadh 11372  
Saudi Arabia



10. تهدف علامة التعجب في المثلث مطابق الأضلاع إلى تنبيه المستخدم إلى وجود إرشادات مهمة حول التشغيل والصيانة في الكتيبات المرفقة بالجهاز.

11. استخدم محول التيار المتردد المتوفر ضمن حزمة المنتج فقط. قد يؤدي استخدام أي محول آخر إلى إلحاق الضرر بالجهاز. لا يشمل الضمان مثل هذا التلف.

stc tv

الاسم:	HP4105-Intigral
رقم الموديل:	Jawwy-TV-2.0
الذاكرة:	2 جيجا بايت
الذاكرة المتحركة:	16 جيجا بايت
مأخذ طاقة:	12V = 1A
بيئة التشغيل:	درجة الحرارة أثناء التشغيل درجة الحرارة أثناء التخزين

HDMI™  
HIGH-DEFINITION MULTIMEDIA INTERFACE

تُعد مصطلحات HDMI ، و HDMI High-Definition Multimedia Interface ، والمظهر التجاري HDMI ، وشعارات HDMI ، علامات تجارية أو علامات تجارية مسجلة لشركة HDMI Licensing Administrator, Inc.



مجمع الملك عبد العزيز للاتصالات، المرسلات، مبنى 5 الطابق 3

ص.ب: 300483، الرياض 11372

المملكة العربية السعودية

1. هذا الجهاز هو جهاز كهربائي معزول مزدوج أو من الفئة II، وقد تم تصميمه بحيث لا يتطلب وصلة أمان أرضية.
2. تحذير: لتقليل خطر نشوب حريق أو حدوث صدمة كهربائية، لا تعرّض هذا الجهاز للأمطار أو الرطوبة. يجب ألا يتعرض الجهاز للتقطير أو الببل وألا توضع على الجهاز أجسام تحتوي على سوائل مثل أواني الزهور.
3. تنبيه: خطر حدوث انفجار إذا تم استبدال البطارية بشكل غير صحيح. استبدله بنوع مماثل أو مكافئ فقط.
4. تحذير: لا يجب تعريض البطاريات (حزمة البطارية أو البطاريات المستخدمة) لدرجات حرارة مفرطة مثل أشعة الشمس أو النار أو ما شابه.
5. تحذير: يُستخدم مقبس التغذية الكهربائية/ وصلة الجهاز/ محول التوصيل المباشر لفصل الجهاز، ويظل جهاز الفصل قابلاً للتشغيل بسهولة.
6.  التحلص الصحيح من هذا المنتج. تشير هذه العلامة إلى أنه لا يجب التخلص من هذا المنتج مع النفايات المنزلية الأخرى، ولمنع الضرر المحتمل للبيئة أو صحة الإنسان من التخلص من النفايات دون رقابة، أعد تدويرها بمسؤولية لتعزيز إعادة الاستخدام المستدام للموارد المادية. لإعادة الجهاز المستخدم، يرجى استخدام أنظمة الإرجاع والتجميع أو الاتصال بالبايع الذي تم شراء المنتج منه. يمكنهم أخذ هذا المنتج لإعادة التدوير الآمن بيئياً.
7. بالنسبة للطرفين بين رمزي "⚡" قد تشكل خطر التعرض لصدمة كهربائية. تتطلب الأسلاك الخارجية المتصلة الأطراف التركيب بواسطة شخص مطلع على التعليمات أو بواسطة أسلاك جاهزة.
8. إن هذا الوميض الصاعق الذي يحمل رمز رأس السهم داخل مثلث مطابق الأضلاع مخصص لتنبيه المستخدم بوجود "جهد خطير" غير معزول داخل حاوية المنتج قد يكون ذا حجم كافي ليشكل خطر التعرض لصدمة كهربائية.
9. تحذير: لتقليل خطر التعرض لصدمة كهربائية، لا تقم بإزالة الغطاء (أو الغطاء الخلفي) حيث لا توجد أجزاء داخلية يمكن للمستخدم صيانتها بنفسه. قم بإحالة أعمال الصيانة إلى موظفين مؤهلين.

- 1. نسيت كلمة المرور/ الرمز التعريفي، ما الحل؟**

يمكنك استرداد كلمة المرور/ الرمز التعريفي بسهولة عبر ميزة إعادة ضبط كلمة المرور/ الرمز التعريفي المتوفرة في شاشة تسجيل الدخول.
- 2. هل يمكنني إعداد ملفات شخصية متعددة لأفراد العائلة؟**

بالأكيد! يمكنك إنشاء ملفات شخصية لك ولأفراد عائلتك من شاشة الإعدادات وتعيين مستوى مناسب للتحكم الأسري لكل ملف شخصي. كما يمكنك إعداد كلمة مرور لإغلاق الملفات الشخصية للتأكد من توفير تجربة ترفيه آمنة للأطفال.
- 3. كيف يمكنني ضبط إعدادات التحكم الأسري على stc tv؟**

يمكنك تعيين مستوى مناسب لعمر التحكم الأسري على كل ملف شخصي. تتراوح تصنيفات التحكم الأسري بشكل تزايد من F (عائلي)، 18، 15، PG، إلى R18 (R18 يحتوي على محتوى غير مقيد). لإعداد التحكم الأسري، يرجى الانتقال إلى الإعدادات والتحكم بإعدادات الملفات الشخصية. كما يمكنك الاستفادة من ميزة قفل القنوات التي تسمح لك بإغلاق تشغيل القنوات التي لا ترغب في مشاهدتها.
- 4. كيف يمكنني مشاهدة البرامج التلفزيونية من البداية؟**

يمكنك مشاهدة البرنامج الذي تم بثه مسبقاً والذي يتم بثه حالياً من البداية باستخدام خاصية الإيقاف والإعادة. اضغط على زر ① في الريموت كنترول لعرض لوحة معلومات البرنامج على الشاشة. انتقل إلى زر الإيقاف والإعادة واضغط OK لمشاهدة البرنامج من البداية.

#### 4. إعداد جهاز التحكم (الريموت كمنترول)

أدخل البطاريات في الريموت كمنترول، ثم اتبع الإرشادات التي تظهر على شاشة التلفزيون لإقران جهاز التحكم (الريموت كمنترول) بجهاز stc tv الخاص بك.

#### 5. إعداد اللغة

اختر لغتك المفضلة من العربية أو الإنجليزية.

#### 6. الاتصال بجهاز يدعم نظام تشغيل Android™

اتبع الإرشادات الظاهرة على الشاشة لإكمال ربط أي من أجهزتك الدعامة لأندرويد بجهاز stc tv. يمكنك تخطي هذه المرحلة إذا رغبت.

#### 7. الاتصال بشبكة واي-فاي

إذا لم يكن الجهاز متصلاً بمنفذ Ethernet، فستتم مطالبتك باختيار شبكة واي-فاي، وإدخال كلمة مرور. يمكنك أيضاً استخدام كابل Ethernet لتوصيل الجهاز بموزع الإنترنت. بمجرد الاتصال، سيقوم الجهاز بتثبيت التحديثات وقد تتم إعادة التشغيل.


#### 8. إعداد حساب جوجل

قم بتسجيل الدخول إلى حساب جوجل وقبول شروط الخدمة، واتباع التعليمات التي تظهر على الشاشة لإكمال الإعداد.

#### 9. الخطوة الأخيرة

سيبدأ تشغيل stc tv الآن. يرجى تسجيل الدخول في stc tv.

مبروك! اكتملت الإعدادات بنجاح. استخدم جهاز التحكم (الريموت كمنترول) لاستكشاف stc tv والاستمتاع بمشاهدة أفلامك، مسلسلاتك وقنواتك المفضلة.

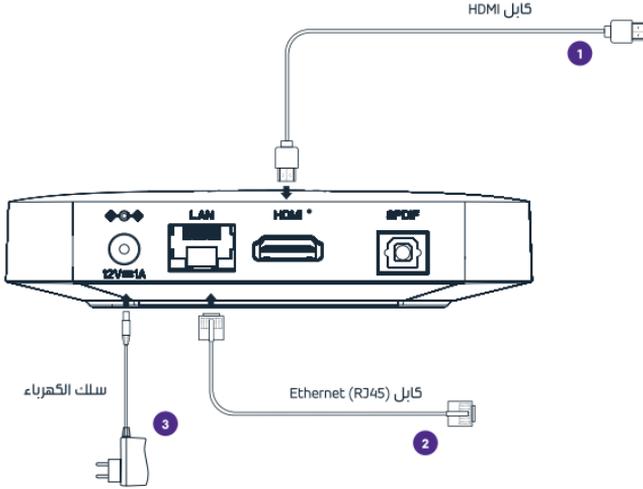

### 1. التوصيل بجهاز التلفزيون


قم بتوصيل جهاز stc tv بالتلفزيون بواسطة كابل HDMI. لعرض الصورة من الجهاز، يجب اختيار الإدخال الخارجي الصحيح. يتم ذلك إما بشكل تلقائي أو يدوياً، باستخدام الزر المخصص بالريموت كنترول الخاص بالتلفزيون. راجع دليل المستخدم الخاص بجهاز التلفزيون للحصول على الإرشادات.

### 2. الاتصال بشبكة الإنترنت


قم بتوصيل جهاز stc tv بالإنترنت عبر منفذ Ethernet مع موزع الإنترنت أو المنفذ الحائطي باستخدام كابل Ethernet المتوفر. إذا لم تتمكن من توصيل الجهاز بمنفذ Ethernet، لا تقلق! يمكنك الاتصال بشبكة واي-فاي بسهولة في وقت لاحق.

### 3. التوصيل بمصدر طاقة

قم بتوصيل مقبس التيار المستمر في جهاز stc tv بمأخذ طاقة. سيتم تشغيل الجهاز وسيظهر شعار stc tv على شاشة التلفزيون.



سلك الكهرباء



كابل HDMI



جهاز التحكم (ريموت كنترول)



جهاز استقبال ذكي بتقنية 4K

## جهاز التحكم (ريموت كنترول)



دليل الاستعمال السريع

stc<sup>tv</sup>